W2430,W2730,W3030,W3330,W3630 W2436,W2736,W3036,W3336,W3636 W2442,W2742,W3042,W3342,W3642

ASSEMBLY INSTUCTIONS

Getting started:

Prepare a solid surface with protection layer to assemble on.

STEP 1: Join side panel with back panel.

STEP 2: Join side panels with back panel and attach top panel for support.


STEP 3: Join bottom panel with side panels and back panel.

STEP 4: Attach face-frame on.

STEP 5: Put in the adjustable shelves.

STEP 6: Fix door onto the face-frame and adjust the cover-space.

8	1 1/2" SOFTCLOSE HINGE	4	1/2" hinge	
7	3/4" ROUND HEAD SCREW	4	3/4" round head screw	
6	BUMPER	4	Bumper	
5	DAMPER	2	Damper	
4	SHELF CLIP	8	Shelf clip	
3	9/16"ROUND HEAD SCREW	70	9/16" round head screw	
2	CLEAT AND BUCKLE	14	Cleat and Buckle	
1	1"FLAT HEAD SCREW FOR CARCASS	6	1" flat head screw	
NO.	Description	QTY	PICTURE	
HARDWARE LIST				

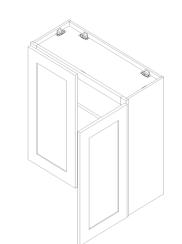

PARTS LIST			
NO.	Description	QTY	
1	FACE FRAME	1	
2	BACK PANEL	1	
3	ADJUSTABLE SHELF	2 OR 3	
4	SIDE PANEL	2	
5	TOP&BOTTOM PANEL	2	
6	CABINETS DOOR	2	



STEP:3

STEP:6

