

**B12,B15,B18,B21**

**ASSEMBLY INSTRUCTIONS**

**Getting started:**

Prepare a solid surface with protection layer to assemble on.

STEP 1: Join side panel with back panel.

STEP 2: Join bottom panel with side panel.

STEP 3: Join side panel with bottom and back panel.













STEP 4: Attach face-frame and toe-kick board.

STEP 5: Join the drawer together, then install the drawer guide.

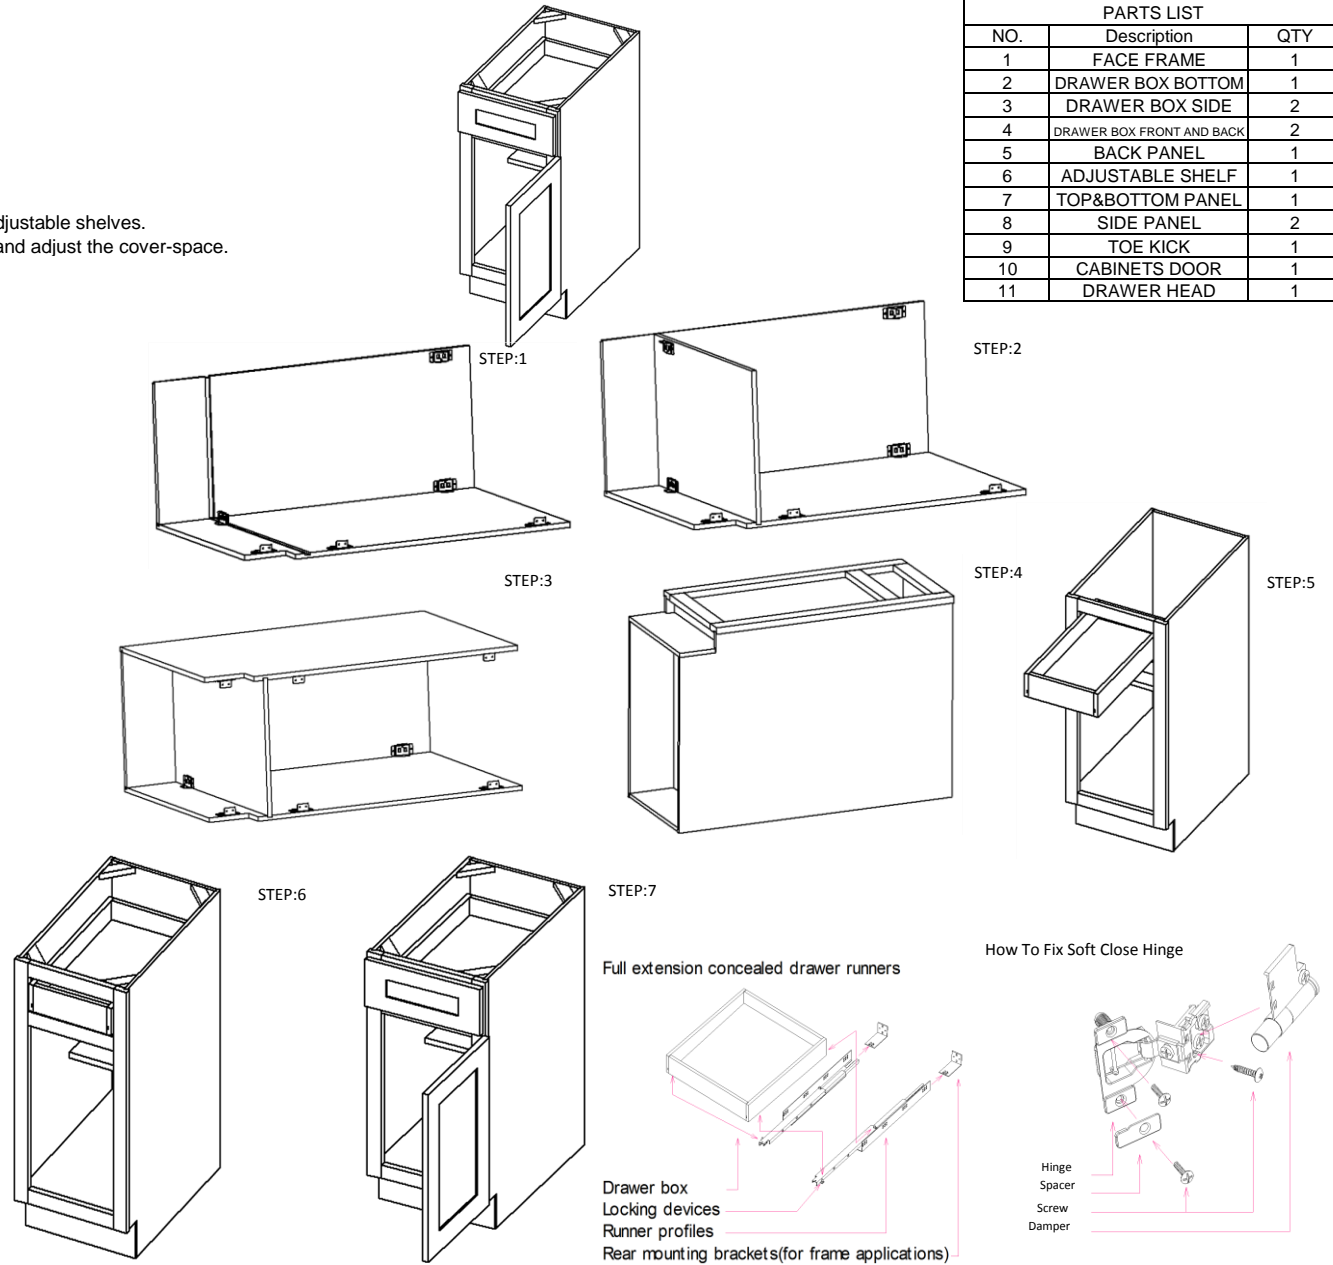
STEP 6: Attach the wooden corner blocks on the top corners, then put in the adjustable shelves.

STEP 7: Fix drawer head on the drawer front and fix door onto the face-frame and adjust the cover-space.

PARTS LIST		
NO.	Description	QTY
1	FACE FRAME	1
2	DRAWER BOX BOTTOM	1
3	DRAWER BOX SIDE	2
4	DRAWER BOX FRONT AND BACK	2
5	BACK PANEL	1
6	ADJUSTABLE SHELF	1
7	TOP&BOTTOM PANEL	1
8	SIDE PANEL	2
9	TOE KICK	1
10	CABINETS DOOR	1
11	DRAWER HEAD	1

12	1 1/2" SOFTCLOSE HINGE	2	
11	3/4" ROUND HEAD SCREW	2	
10	BUMPER	6	
9	DAMPER	1	
8	1" ROUND HEAD SCREW	4	
7	Selfclose slider	1	
6	SHELF CLIP	4	
5	9/16" ROUND HEAD SCREW	50	
4	CLEAT AND BUCKLE	10	
3	1" FLAT HEAD SCREW FOR CARCASS	2	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	
NO.	Description	QTY	PICTURE

**HARDWARE LIST**



Full extension concealed drawer runners

How To Fix Soft Close Hinge

Drawer box  
Locking devices  
Runner profiles  
Rear mounting brackets (for frame applications)

Hinge  
Spacer  
Screw  
Damper