

3DB12,3DB15,3DB18,3DB24,3DB30,3DB36

ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Join side panel with back panel.

STEP 2: Join bottom panel with side panel.


STEP 3: Join side panel with bottom and back panel.

STEP 4: Attach face-frame and toekick board.





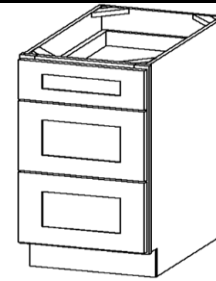



STEP 5: Join the drawers together, then install the drawer guides.

STEP 6: Attach the wooden corner blocks on the top corners, then put on the adjustable shelves.

STEP 7: Fix drawer head on the drawer front and fix doors onto the face-frame and adjust the cover-space.



PARTS LIST		
NO.	Description	QTY
1	FACE FRAME	1
2	DRAWER BOX BOTTOM	3
3	DRAWER BOX SIDE	2
4	DRAWER BOX SIDE	4
5	DRAWER BOX FRONT AND BACK	2
6	DRAWER BOX FRONT AND BACK	4
7	BACK PANEL	1
8	TOP&BOTTOM PANEL	1
9	SIDE PANEL	2
10	TOE KICK	1
11	DRAWER HEAD	1
12	DRAWER HEAD	2

8	BUMPER	12	 Bumper
7	1" ROUND HEAD SCREW	12	 1" round head screw
6	21" SELFCLOSE SLIDE	3	 Selfclose slider
5	9/16" ROUND HEAD SCREW	50	 9/16" round head screw
4	CLEAT AND BUCKLE	10	 Cleat and Buckle
3	1" FLAT HEAD SCREW FOR CARCASS	2	 1" flat head screw
2	WOOD BLOCK	4	 Wood block
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	 1" flat head screw
NO.	Description	QTY	PICTURE

HARDWARE LIST

