


## INSTALLATION INSTRUCTIONS

**Professional Custom Liner - Models:** Arch-Angle-Liner-30  
Arch-Angle-Liner-36

### Model Arch-Angle-Liner-30

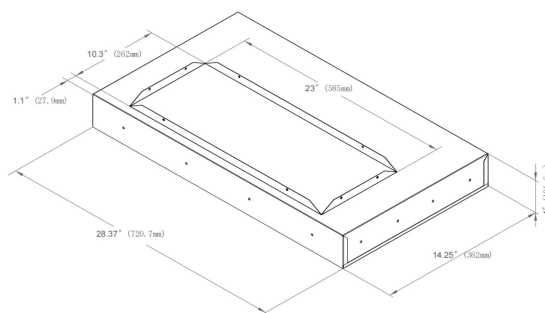


### Parts included with your custom liner:

- Stainless steel custom liner for use with our ventilator models (HOODFAN-25" & 27")
- Hardware bag with Philips head screws for installation

### Tools required for installation:

- Phillips head screwdriver
- Tape measure
- Level

### Model Arch-Angle-Liner-36

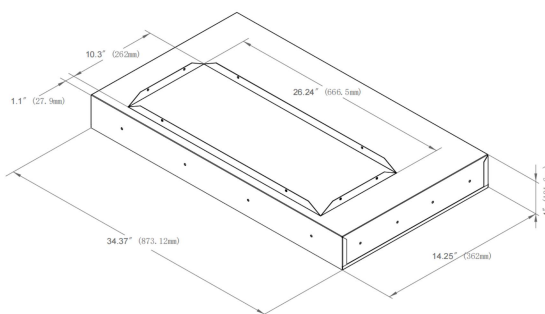

### To install your custom liner with our ventilator:

- 1) Remove any protective film from all parts (if applicable).
- 2) Insert ventilator up through liner opening.
- 3) Secure ventilator to the flanges of the liner using phillips head screws.
- 4) Attach the rear panel to the back of liner.

