

BT9

ASSEMBLY INSTUCTIONS

Getting started:

Prepare a solid surface with protection layer to assemble on.

STEP 1: Join side panel with back panel.


STEP 2: Join bottom panel with side panel.

STEP 3: Join side panel with bottom and back panel.








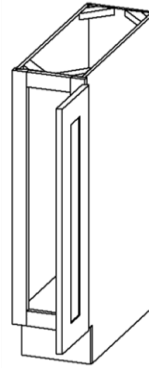

STEP 4: Attach face-frame and toekick board.

STEP 5: Attach the wooden corner blocks on the top corners.


STEP 6: Fix door onto the face-frame and adjust the cover-space.




PARTS LIST		
NO.	Description	QTY
1	FACE FRAME	1
2	BACK PANEL	1
3	TOP&BOTTOM PANEL	1
4	SIDE PANEL	2
5	TOE KICK	1
6	CABINETS DOOR	1

9	1 1/2" SOFTCLOSE HINGE	2	 1 1/2" hinge
8	3/4" ROUND HEAD SCREW	2	 3/4" round head screw
7	BUMPER	2	 Bumper
6	DAMPER	1	 Damper
5	9/16"ROUND HEAD SCREW	50	 9/16" round head screw
4	CLEAT AND BUCKLE	10	 Cleat and Buckle
3	1"FLAT HEAD SCREW FOR CARCASS	2	 1" flat head screw
2	WOOD BLOCK	4	 Wood block
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	 1" flat head screw
NO.	Description	QTY	PICTURE


HARDWARE LIST

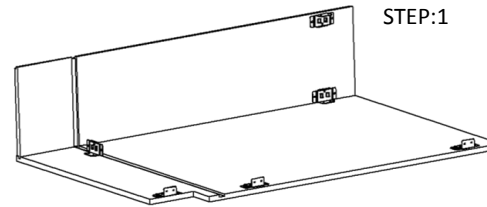


STEP:1

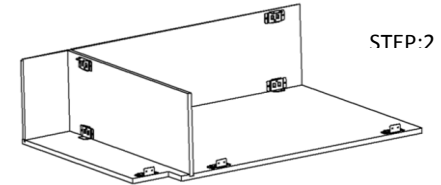


STFP:2

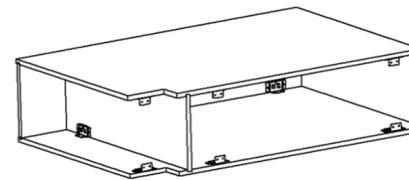


STEP:3

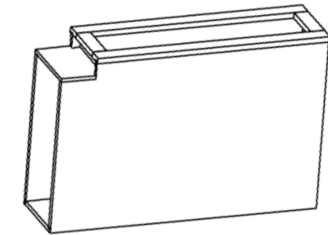

STFP:4

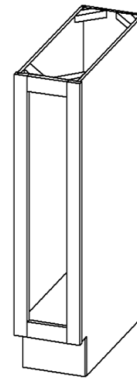

STEP:5

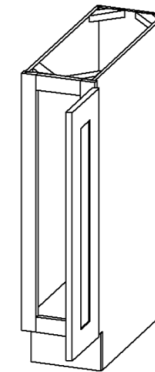

STEP:6

How To Fix Soft Close Hinge

