

OE1230,OE1236,OE1242

ASSEMBLY INSTUCTIONS


Getting started:

prepare a protection layer, a screwdriver




STEP 1: Join top and bottom panel with side panel.



STEP 2: Join middle and bottom panel with side panel.

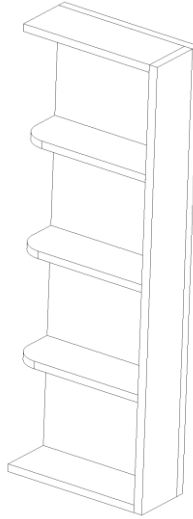STEP 3: Join back panel with side panel.

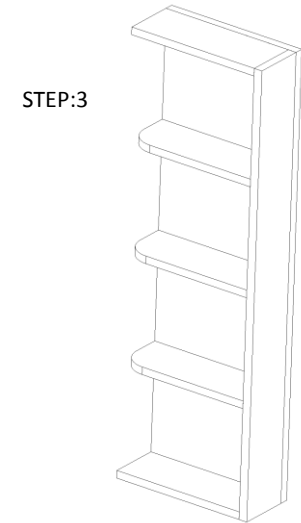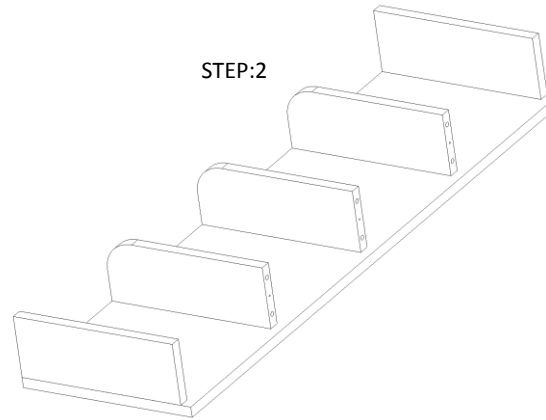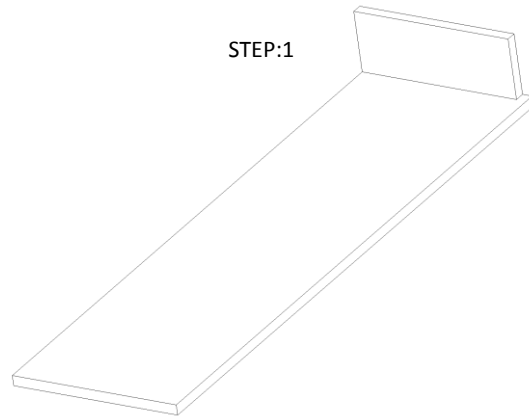

PARTS LIST		
NO.	Description	QTY
1	SIDE PANEL	1
2	SIDE PANEL	1
3	ADJUSTABLE SHELF	4 OR 5



2	DOWEL	24 OR 19	 Dowel
1	1"FLAT HEAD SCREW FOR CARCASS	19	 1" flat head screw
NO.	Description	QTY	PICTURE
HARDWARE LIST			